

CÓDIGOS DE PROGRAMACIÓN PARA DVD

AIKO	3004, 3522, 3523	JBL	3153, 3156	RCA	3181, 3212, 3223, 3225
	3005, 3169, 3170, 3171	JC PENNEY	3356		3271, 3276, 3324, 3390
AIWA	3291, 3442, 3456, 3463		3051, 3100, 3152, 3239		3409, 3413, 3414, 3415
	3504		3250, 3288, 3284, 3325		3426, 3460, 3478
AKAI	3038, 3374	JVC	3333, 3346, 3446, 3505	ROTEL	3100, 3339
	3006		3509, 3519	ROWA	3267, 3340
AKUSTIC	3007, 3128, 3174, 3296	JWIN	3180, 3410	ROYAL	3062, 3148, 3353, 3354
AMW	3197, 3372, 3404	KENWOOD	3032, 3033, 3034, 3221		3355, 3370, 3395, 3507
ANAM	3275	KLH	3122, 3225, 3419	SAMPO	3260, 3322, 3341
	3275	KONKA	3035, 3196		3027, 3030, 3072, 3073
APEX DIGITAL	3008, 3015, 3125, 3172	KOSS	3084		3074, 3109, 3110, 3111
	3173, 3195, 3212, 3263	LAFAYETTE	3062, 3105		3112, 3136, 3182, 3236
	3265, 3268	LASONIC	3036, 3037, 3208, 3218		3237, 3238, 3279, 3341
3429			3107, 3108, 3168, 3232	SAMSUNG	3343, 3347, 3359, 3400
ATIVIO	3029		3235, 3303, 3308, 3312		3418, 3520, 3530, 3531
AUDIOVOX	3034, 3541		3313, 3336, 3342, 3483		3539, 3545
B & K	3259	LG	3484, 3485, 3544	SANSUI	3086, 3324, 3396
BALANCE	3365	LINTRON	3084		3075, 3076, 3086, 3125
BLAUPUNKT	3212	LUFSONH	3041	SANYO	3166, 3226, 3310, 3325
BLUE LIGHT	3331, 3360		3034, 3163, 3276, 3397		3452, 3467, 3527
BLUE PARADE	3067	MAGNAVOX	3411, 3443		3336
BOSS	3204, 3433		3042, 3153, 3216, 3356	SEARS	3077, 3078, 3079, 3080
BOSCH	3096	MAJESTIC	3164	SHARP	3183, 3184, 3156, 3560
CAMBRIDGE SOUNDWORKS	3277	MALATA	3043, 3044, 3045, 3046		3257
CINEVISION	3270	MARANTZ	3064, 3297, 3338, 3480	SHINSONIC	3001, 3026, 3262
CLARION	3157, 3287, 3461		3503	SILLO	3023, 3306, 3347, 3394
CLASSIC	3010, 3011, 3142, 3143	MATRIX	3190	SKYWORTH	3186
	3510	MEGA TANS	3047	SMC	3081, 3316, 3326
COBY	3012, 3246, 3253, 3322	MEMOREX	3437, 3526, 3538, 3601	SONICO	3129
	3339, 3422, 3457, 3496		3619		3001, 3002, 3003, 3130
3497					3140, 3141, 3144, 3145
COLUMBIA	3006, 3008, 3357, 3371	MICROSOFT	3026		3146, 3161, 3165, 3206
CREATOR	3366	MINTEK	3212		3210, 3309, 3311, 3323
CYBER HOME	3013, 3242, 3260, 3373	MIRAGE	3201, 3348, 3441		3329, 3444, 3453, 3454
	3014, 3015, 3016, 3017	MITSUBISHI	3049, 3049		3455, 3470, 3486, 3499
	3018, 3019, 3020, 3021		3007, 3018, 3051, 3052		3525, 3537, 3542
	3124, 3126, 3137, 3143	MITSUI	3139, 3151, 3189, 3280		3127
DAEWOO	3156, 3175, 3176, 3191		3362, 3363, 3387, 3389	SOUND TRACK	3158, 3367
	3202, 3205, 3208, 3227		3449, 3471, 3493, 3524	SPELER	3305
	3254, 3289, 3302, 3348		3500, 3521, 3521, 3350	SUNGLAE	3305
	3377, 3378, 3392, 3450	MITZU	3420, 3423, 3469	SUPERSONIC	3062, 3082, 3149
	3462, 3465		3432	SYLVANIA	3163, 3266, 3338
DANTAX	3376	MITZUI	3432	SYMPHONIC	3163
	3014, 3015, 3016, 3017	MONTGOMERY WARD	3337	TCL	3381
	3018, 3019, 3020, 3021	MTB	3053, 3054	TEAC	3083
	3124, 3126, 3137, 3143	MUSTEK	3142	TECHNICS	3032
	3156, 3175, 3176, 3191	NAKAMICHI	3055	THETA DIGITAL	3067
	3202, 3205, 3208, 3227	NAOKI	3222, 3230, 3344, 3368	THOMSON	3070, 3349
	3254, 3289, 3302	NAPA	3506, 3154	TOP TEC	3084, 3348
DAYTEK	3022, 3032, 3342	NECSTAR	3394		3167, 3233, 3307, 3435
	3318	NESE	3212	3502	
DENON	3029, 3177	NORCENT	3057, 3175, 3278		3034, 3085, 3086, 3087
DIGI MEDIA	3211	ONKYO	3034, 3058, 3059, 3278		3116, 3117, 3118, 3162
DMITCHE	3211	ORITRON	3084, 3245		3187, 3214, 3224, 3241
	3285	OSAKI	3164, 3498, 3501		3272, 3292, 3298, 3314
DURABRAND	3412		3032, 3060, 3061, 3101		3315, 3464, 3466, 3473
	3131, 3136, 3192, 3205	PANASONIC	3103, 3150, 3151, 3209		3488, 3498
	3215, 3243, 3245, 3247		3228, 3234, 3273, 3274	TREDEX	3053, 3321, 3327
	3408, 3416, 3421, 3434		3299, 3300, 3330, 3345	TRENT	3424
DVD	3514, 3532, 3533		3358, 3379, 3406, 3448	UNIREX	3088, 3255
	3048		3479, 3534, 3535, 3543	UNITRON	3084
	3334		3579	URBAN CONCEPTS	3034
ELECTRON	3019, 3024, 3158, 3198	PARK	3388	VCD 2	3089
	3199, 3200, 3320, 3349		3062, 3063, 3104, 3133	VENTURER	3225
	3352, 3393, 3481, 3482	PHILCO	3138, 3147, 3159, 3160	VIDAL DVD	3328, 3491, 3492
	3037, 3038, 3202, 3229		3194, 3195, 3220, 3225	VIDEO CD	3123, 3124, 3125, 3126
EMERSON	3231, 3240, 3285, 3301		3244, 3290, 3330, 3380		3425
	3340		3417, 3436, 3444, 3458	VIOS	3219
ENCORE	3610		3460, 3516	VIVO VISION	3219
ENTERPRISE	3038		3034, 3043, 3064, 3065	VOX	3090, 3518
FISHER	3075, 3119, 3132, 3468		3066, 3113, 3114, 3120	VSONIC	3203, 3361, 3407
	3512, 3513, 3521		3134, 3188, 3249, 3258	WEGA TANNIS	3155, 3364
FOROX	3428		3269, 3276, 3281, 3282	XBOX	3026, 3438, 3439
FUSSION	3025, 3207, 3380, 3487		3283, 3284, 3304, 3319	YAHOO!	3431
FUTURETECH	3332	PHILIPS	3332, 3334, 3398, 3459		3032, 3043, 3091, 3092
	3026, 3178, 3212		3546		3093, 3094, 3095, 3096
GENERAL SOUND	3248		3066	YAMAHA	3451
GO VIDEO	3027, 3028, 3102, 3494		3032, 3067, 3068, 3115		3097, 3475, 3517
	3528		3193, 3213, 3472, 3476	YAMAKAWA	3097, 3402
GOTECH	3133, 3317		3477, 3511, 3529, 3536	YAMASAKI	3034, 3038
GPX	3028, 3084, 3261		3375	ZENITH	3098, 3099, 3329, 3474
GRADIENTE	3084		3043	ZONDA	
GREEN HILL	3212, 3343		3069		
HARMANIKARDON	3153, 3256, 3447, 3506		3217		
HARMONY	3252, 3344		3026		
HITACHI	3030, 3079, 3179, 3326		3122		
	3500, 3515		3401		
HITEKER	3008, 3345		3084, 3323		
HYUNDAI	3430		3007		
INSIGNIA	3607, 3618		3026		
INTEGRA	3058, 3278		3122		
IRT	3028		3401		
	3327, 3333, 3337, 3350		3084, 3323		
ISEL	3445		3007		
			3026, 3067, 3070, 3071		

CÓDIGOS SATELITE Y CABLE

ALPHASTAR	6031
CABLEVISION	6010, 6011, 6012, 6061
COSSHIP	6068
CROSSDIGITAL	6036
CHAPARRAL	6027
DAEWOO	6015, 6016, 6066, 6009
DIRECTV	6014, 6015, 6028, 6033
DISH NETWORK 1	6036, 6037, 6039
DISH NETWORK SYSTEM	6019, 6020, 6021, 6022
DISHPRO	6019, 6020, 6023, 6024
ECHOSTAR	6025, 6026, 6069
EXPRESSVU	6019, 6020
GDI GDRG-86X	6062
GENERAL INSTRUMENT	6001, 6035
GOI	6019
HITACHI	6033
HTS	6019
HUGHES	6037
HUGHES NETWORK SYSTEM	6005
JERROS	6005, 6037
HIGHLINE	6001, 6011
JVC	6019
MAGNAVOX	6015, 6030
MEGACABLE	6010, 6011, 6012
MEMOREX	6015
MITSUBISHI	6005
MOTOROLA	6008, 6010, 6012, 6035
MOTOROLA	6070
NEXT LEVEL	6035
PACE	6002
PANASONIC	6028, 6029
PAYSAT	6015
PHILIPS	6005, 6006, 6007, 6015
PIONEER	6030, 3037
RADIOHACK	6035
RCA	6003, 6034, 6067
SAMSUNG	6036, 6038
SATELLITE CAN	6066
SCIENTIFIC ATLANTA	6004
SKY MOTOROLA	6008
SKY PACE	6002
SKY PHILIPS	6007
SKY RCA (THOMSON)	6007
SKY UEC	6018
SKY ZENITH	6008
SKY + HD	6071
SKY VETV	6008
SONY	6014
STAR CHOICE	6035
THOMPSON	6007, 6009
TIVO	6017
TOCOM	6001
TOSHIBA	6005, 6032
TOSHIBA DIRECTV	6065
UEC	6018
ULTIMATE TV	6014
ULTRAVISION	6001
ULTRAVISION DIGITAL	6063
UNIDEN	6015, 6030, 6059, 6060
ZENITH	6008, 6039

CÓDIGOS DE PROGRAMACIÓN PARA BLU RAY

AIWA	3562, 3584, 3585, 3586	LG	3544, 3556, 3570, 3582	PHILIPS	3546, 3557, 3566, 3573
ATIVIO	3598, 3600	MARANTZ	3553, 3568, 3569		3574, 3575
DAEWOO	3594, 3595	MEMOREX	3563, 3601	PIONEER	3587, 3588
HITACHI	3577, 3578, 3596	MITSUBISHI	3554, 3555, 3558	POLAROID	3564, 3597
JVC	3548, 3549, 3550	PANASONIC	3543, 3579, 3583, 3599	RCA	3565
KENWOOD	3551, 3552	PHILCO	3576, 3580, 3581	SAMSUNG	3545, 3559